

Technical Bulletin 533

Installation of 90° Connector


These installation instructions apply to all three 90° Connectors pictured below:



6-pin MS type




7-pin MS type

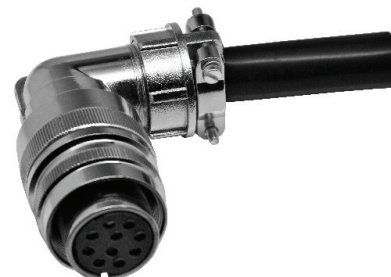

10-pin MS type

- 1 Before** rotating 90° Connector, loosen second Lock Ring.


Only loosen Lock Ring enough to allow easy movement. It is not necessary to disassemble Connector from Encoder.

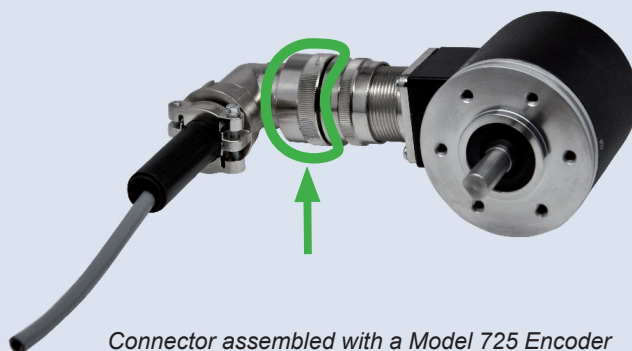

Connector assembled with a Model 725 Encoder

- 2 Failure to loosen Lock Ring will result in twisted wires and a damaged connection.**

NOTE: This photo is for demonstration purposes only; loosening the second Lock Ring will not expose the wires and the connection.

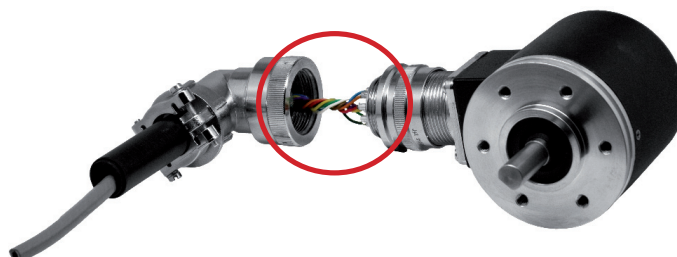

- 3 CAUTION:** Do not rotate 90° Connector more than 180° in either direction. Rotation past 180° will damage the connection.

ACCUCODER™
Encoder Products Company

British Encoder Products Company
Tel: +44 (0) 1978 262100 • Fax: +44 (0) 1978 262101
www.encoder.co.uk • sales@encoder.co.uk